




## Step #01

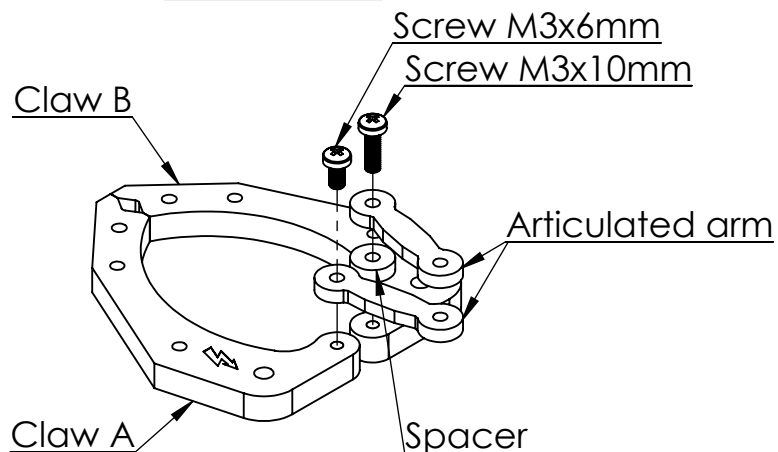

## Step #03

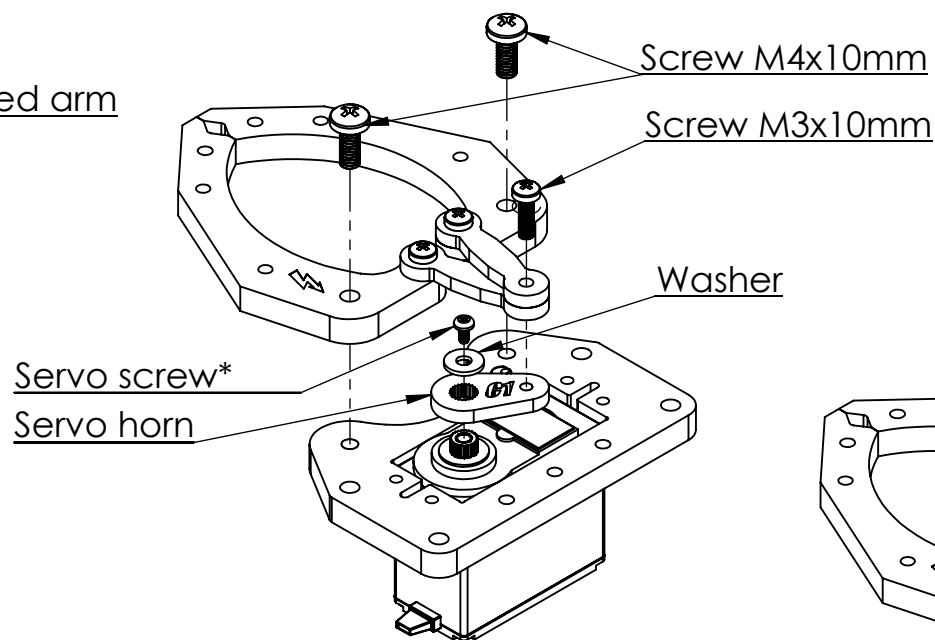


## Step #02

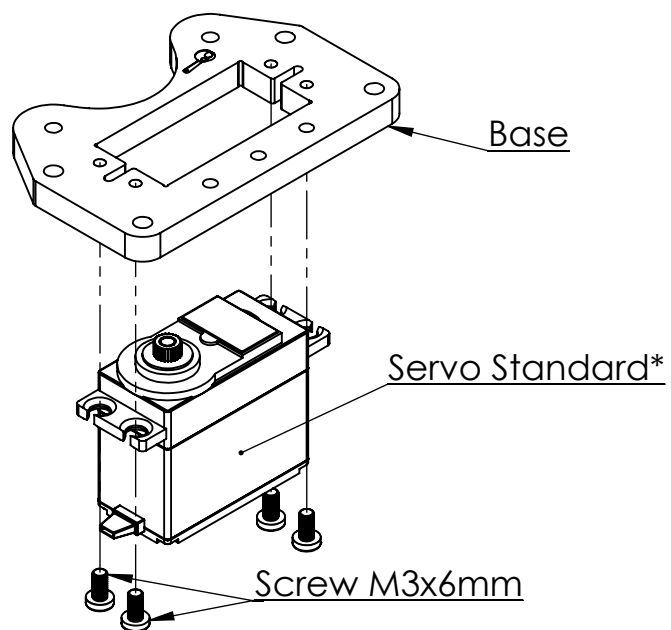

### Assembling Tips!

-During assembly do not apply excessive torque on the screws.

-Moving parts should be left with a slight slack to not load too much the Servo.

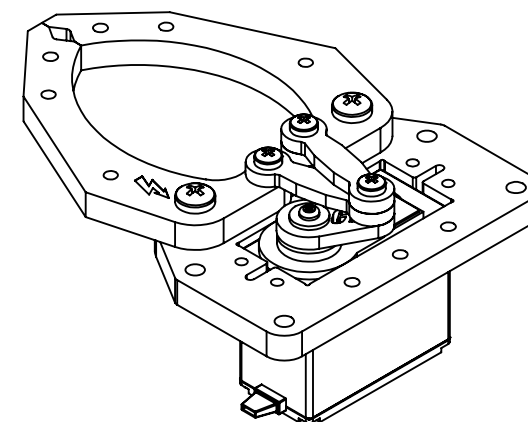

\* Servo sold separately

|         |                               |                      |                                                      |             |
|---------|-------------------------------|----------------------|------------------------------------------------------|-------------|
|         | All dimensions in millimeters |                      | ROBOCORE TECHNOLOGY                                  |             |
|         | Department:                   | Virtual store        | <b>Robotic Claw Assembling</b><br><br><b>Crow V2</b> |             |
|         | Project:                      | Robocore Claw        |                                                      |             |
|         | Project Resp:                 | Robocore Engineering |                                                      |             |
|         | Data:                         | 2017                 |                                                      |             |
|         | Amount:                       | 001                  | Model: <b>A4</b><br>Landscape                        |             |
|         | MATERIAL:                     | PMMA and PS          |                                                      |             |
| WEIGHT: | 35 grams without Servo        |                      | SCALE 2:3                                            | Page 1 of 1 |